

# COMBINE

Build up your own combination for a unique style

DOOR AND WINDOW

FLOOR AND WALL


CEILING AND WALL

WALL TREATMENT

## CASING

MODEL NUMBER      MODEL NUMBER


- 1** CR003      **2** CR690

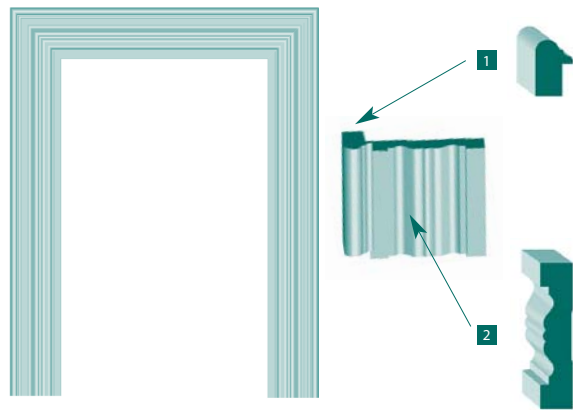

## CASING

MODEL NUMBER      MODEL NUMBER


- 1** CR677      **2** CR692

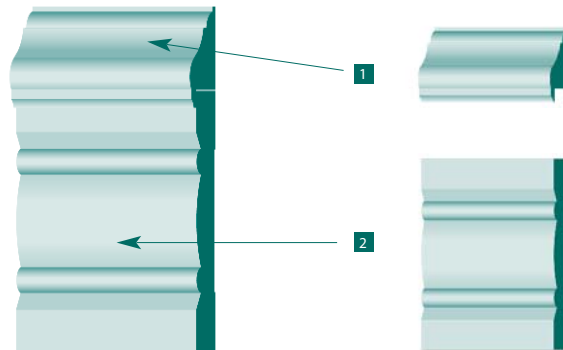

## BASEBOARD

MODEL NUMBER      MODEL NUMBER


- 1** CR688      **2** CR674
- 3** CR683

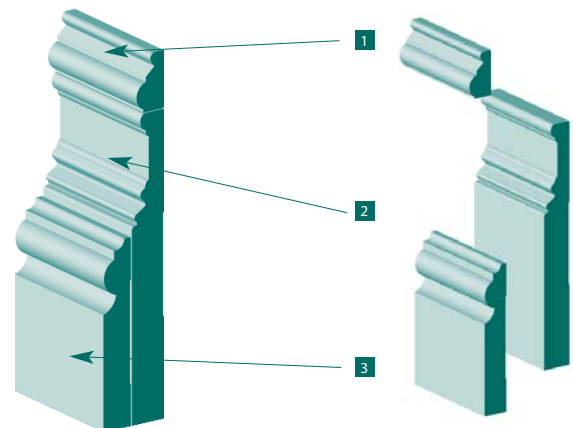

## BASEBOARD

MODEL NUMBER      MODEL NUMBER


- 1** CR674      **2** CR669

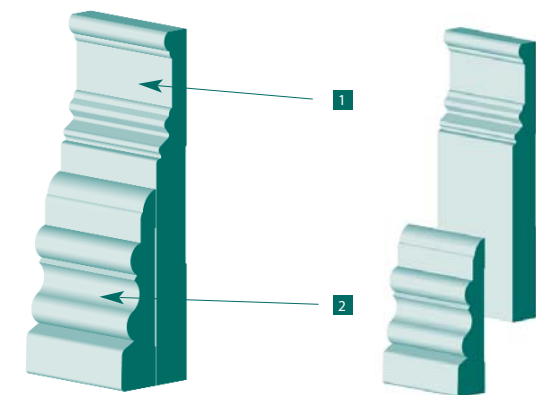

## CROWN

MODEL NUMBER      MODEL NUMBER


- 1** CR674      **2** CR696
- 3** CR688

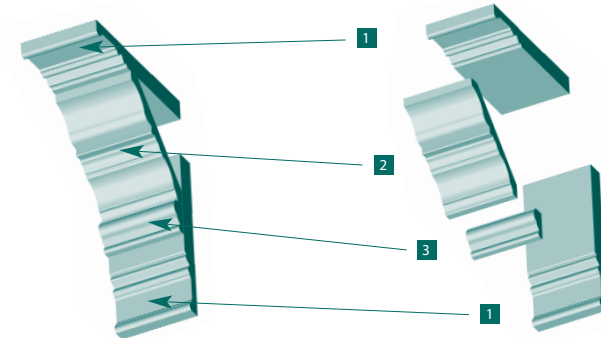

## CROWN

MODEL NUMBER      MODEL NUMBER


- 1** CR699      **2** CR678
- 3** CR688

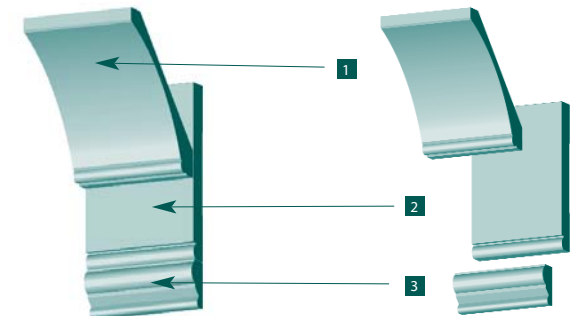

## CHAIR RAIL

MODEL NUMBER      MODEL NUMBER


- 1** CR677      **2** CR687

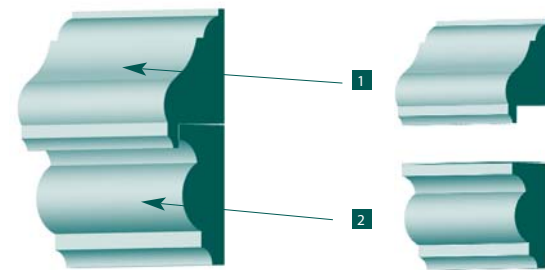

## CHAIR RAIL

MODEL NUMBER      MODEL NUMBER


- 1** CR003      **2** CR692

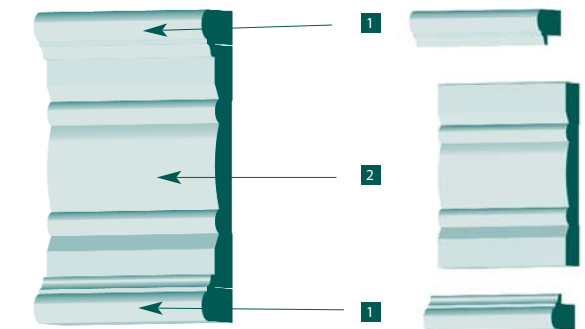

## PANELING

MODEL NUMBER      MODEL NUMBER

- 1** CR686      **2** CR670

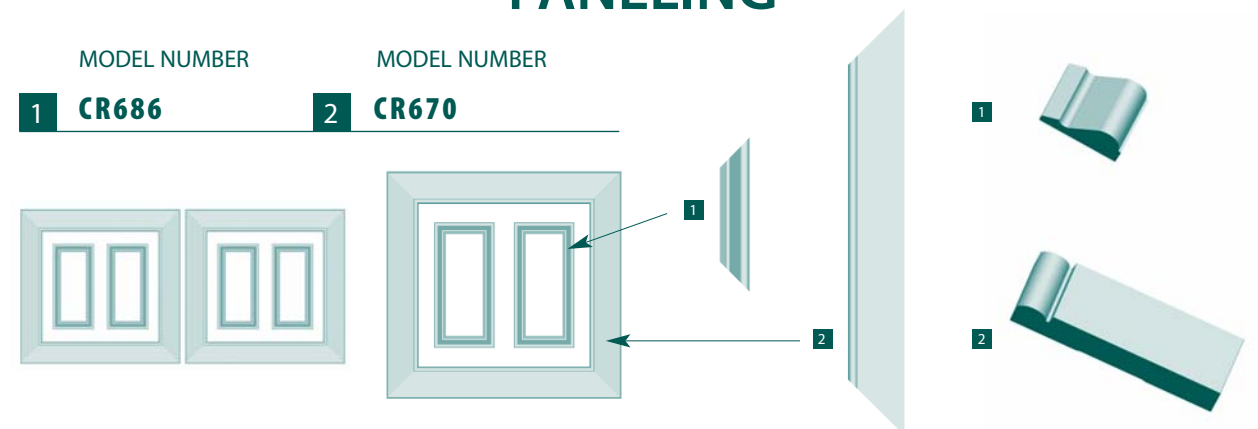

Click Your Way Into Our Combination IDEA CENTRE

[www.alexandriamoulding.com](http://www.alexandriamoulding.com)